


Wheel Well Repair Kit Made From 16 Gauge Galvanized Steel

For Amtran and IC

Part #2241534C2TGT

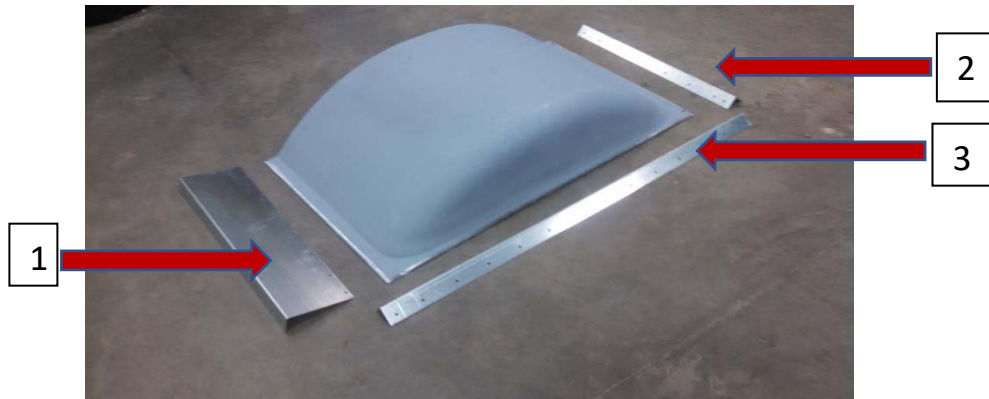

The Wheel Well Extension Kit includes three extension pieces (red arrows above) and 71 self-tapping screws. The kit does not include the Wheel House part # 2241534C2

INSTALLATION INSTRUCTIONS

STEP 1

Drill holes every 4 inches along the edge of the wheel house



STEP 2

Prior to installing the new parts clean the wheel house making sure it is free from debris, screws and rust to ensure proper installation (The new wheel house must fit tightly against the old wheel house). Install the wheelhouse with the outer edge up first against the inside of the outer body panel. It is useful to use a jack to raise the wheel house into place.



STEP 3

Install the three extension pieces (adhesive optional) using the 71 self-tapping screws.



It is important to insert the self-tapping screws in the holes you drilled along the edge of the wheel house in the step 1 as well.

